

Recommended Installation Procedures: Trapeze Support Systems

(Non-Penetrating Support Systems for Rooftop Piping and Ductwork)

MAPA Products pipe supports are designed to meet the 2003 International Building Code in conformance with MSS SP-58 requirements. These freestanding/non-penetrating support systems are typically installed on flat roof applications regardless of roof composition.

Where roof pitch exceeds 1:12 and supports are installed perpendicular to slope, contact your MAPA Products representative for installation alternatives.

Refer to project specifications when required to attach supports to the roof membrane or deck.

Note: MAPA Products does not perform engineering design; the structural engineer is responsible for confirming that the structure upon which supports are installed is designed in accordance with accepted design codes and standards which allow for the installation of rooftop equipment and piping. Further, MAPA Products shall not be liable for damage or injury caused by improper use or installation of the product.




Installation Details:

Trapeze Supports:

- Supports should be evenly spaced so that weights are evenly distributed and do not exceed the maximum weight as outlined by its technical information in the current product catalog or as otherwise stated in the project specifications (*See page 2 of O&M for recommended rooftop support weight limits*).
- If applicable, remove ballast and/or debris from the designated support area.
- If an additional support pad is to be utilized, place pad in the designated support area. If specified, adhere support pad to roof membrane as directed by the roofing manufacturer or as otherwise stated in project specifications.
- Place support as appropriate on either the roof membrane or centered on the support pad. Where specified, adhere support to pad. MAPA Products recommends E-6000 adhesive.
- Place trapeze assembly into bases and secure with provided hardware.
- Place piping or duct on the support. Single piping should be centered with multiple pipes spaced equally on the support. In all cases, piping should be placed so that weight is evenly distributed on the support and overall system load is balanced so as not to cause undue strain on any individual support. Supports are not intended as a platform for piping assembly, but when used as such, care should be taken to avoid damage to the support and surrounding roof area.
- Vertical adjustments should be made with regard to the nature of the installation; either leveled or tapered for flow.
- Secure piping or duct to support as required by project specifications.
- Supports should be cross-braced at intervals as stated by design engineer in project specifications. Where not specified by design engineer, MAPA Products recommends cross-bracing at the end of each run where support height meets or exceeds 24" and/or where the distance from roof surface to bottom of pipe or cross member for duct exceeds 12" then at 80' intervals or where sway is detected after installation is complete (*See Figure 1 / pg.2 O&M*).
- Replace ballast around the support or pad as appropriate.

Recommended Rooftop Support Weight Limits

Figure 1- Typical Sway Bracing

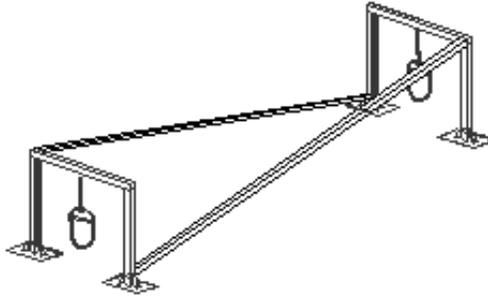

MAPA Master Base Supports

Recommended Weight / Lbs. Per Base	MB-815/MB-1010	MB-1416/MB-1616	MB-2020
	250	500	800

Note:

- Maximum support spacing should not exceed 10' O.C.
- Additional supports are recommended at each change of direction, branch and at each initiation and termination of the piping run.
- It is the responsibility of the installer to coordinate with the specifying engineer the necessity and/or method in which the support system should be secured against wind shear or uplift.

(Recommended support spacing based on the ASME standard recommended pipe support spacing guidelines.)

(See MAPA Products current catalog for additional information.)

Maintenance:

Often, damage to piping and supports systems occurs during routine maintenance, renovations and/or improvements. This type of damage is difficult to verify, therefore MAPA Products must be notified ten (10) days in advance of roof traffic in conjunction with any major maintenance, renovations and/or improvements and upon completion of said traffic. Damage caused by said traffic is not warranted.

For specific challenges where project design requires custom fabrication for greater adjustability, increased elevations or greater weight loads, additional flanges, material changes, etc. may be incorporated into the design. The project engineer is encouraged to contact MAPA Products for support in these situations.

MAPA Products recommends that support systems be inspected annually. Notice of damage or rusting that is detrimental to the integrity of the support or any of the components included in the support assembly should be provided to MAPA immediately. The owner should conduct annual maintenance to inhibit rusting of any metal components. Refer to MAPA Products warranty effective September 2005.

MAPA Products

This document is copyrighted. This document may not in whole or part, be copied, duplicated, reproduced, translated, electronically stored, or reduced to machine-readable form without prior written consent from **MAPA Products, LLC**.

Although the material contained herein has been carefully reviewed, **MAPA Products** does not warrant it to be free of errors or omissions.

MAPA Products reserves the right to make corrections, updates, revisions, or changes to the information contained herein.

Printed in the United States of America.

Installation-MAPA Products Trapeze Support Systems

Publication: January 2009

Form: MI1004

MAPA Products, LLC.
 103 C J Wise, Naples, TX 75568
 MAPA: 903-781-6996
 customerservice@mapaproducts.com